

TECHNICAL DATA

FTP 和 FTPL SureGrip™保险型测试探头和套件



主要特性

- Built-in fuses for additional measurement protection
- Probes allow indication of live voltage even with blown fuse, helping to prevent the user from thinking no voltage is present
- 2 mm threaded probe tips include removable 4 mm lantern-style spring contacts and removable GS38 insulated IC caps for probing closely spaced leads
- Operating temperature – 20°C to 50°C (-5°F to 120°F)
- CAT III 1000 V, CAT IV 600 V, 10 A rating

产品概述: FTP 和 FTPL SureGrip™保险型测试探头和套件

为了响应新的ESA规范，福禄克引入了带有内置保险丝的测试探头来进行额外的测量保护。而且，如果探针熔断器确实熔断，这些探针仍然允许仪表指示带电电压，这有助于防止可能出现的对没有电压的误读。新的模块化FTP探头可以安装到任何侥幸模块化的引线格式。额定到CAT III 1000 V，这些探头还具有可拆卸的护套保证额外安全。

产品规格: FTP 和 FTPL SureGrip™保险型测试探头和套件

- Probes allow indication of live voltage even with blown fuse for added security¹
- Built-in 1000 V, 11 A fuses with 20 kA interrupt rating

- 2 mm threaded probe tips include removable 4 mm lantern-style spring contacts and removable GS38 insulated IC caps for probing closely spaced leads
- Operating temperature -20°C to 50°C (-5°F to 120°F)
- CAT III 1000 V, CAT IV 600 V, 10 A rating, Pollution Degree 2
- Recommended for use with Fluke modular TL224 SureGrip™ silicone test leads and compatible with most modular test leads
- Replace fuse by unscrewing probe handle at finger guard. Use only Fluke fuse part number 803293
- Current mode is non-functional with blown fuse

1. Voltage readings with blown fuse are approximate and vary with the meter impedance. Before and after each measurement, verify presence of blown fuse by checking continuity of the fused test probe. See explanation below under “DMM Input Impedance.” Current mode is non-functional with blown fuse.

Ordering information



Fluke FTP

FTP 和 FTPL SureGrip™保险型测试探头和套件



Fluke. 让您的工作畅通无阻。

福禄克测试仪器（上海）有限公司 电话：400-810-3435 ©2024 福禄克公司
10/2024
北京福禄克世禄仪器维修和服务有限公司 电
话：400-615-1563 未经许可，本文档禁止修改
福禄克测试仪器（上海）有限公司上海维修中心 电
话：021-54402301, 021-54401908分机269
福禄克测试仪器（上海）有限公司深圳第一特约维修点
电话：0755-86337229